



67 GHz 1550 nm Optical Intensity Modulator

Description

The IM67-15-XX is a 67 GHz thin-film lithium niobate Mach Zehnder (MZI) modulator that operates at 1550 nm. This device features flat performance through 110 GHz. Featuring low half-wave voltage and high linearity. This device supports various modulation formats OOK, PAM-N, DMT, and more. This device also features both input and output optical power monitoring photodiodes.


Features

- 67 GHz 3 dB bandwidth
- 110 GHz 6 dB bandwidth
- 1.00 mm RF connector
- Low half-wave voltage
- Polarization maintaining fiber
- Input/Output power monitoring photodiodes
- Ability to choose desired optical connector.
- Ability to choose desired fiber length.



Applications

- Telecommunications
- RF over Fiber (RfOF)
- Microwave Photonics

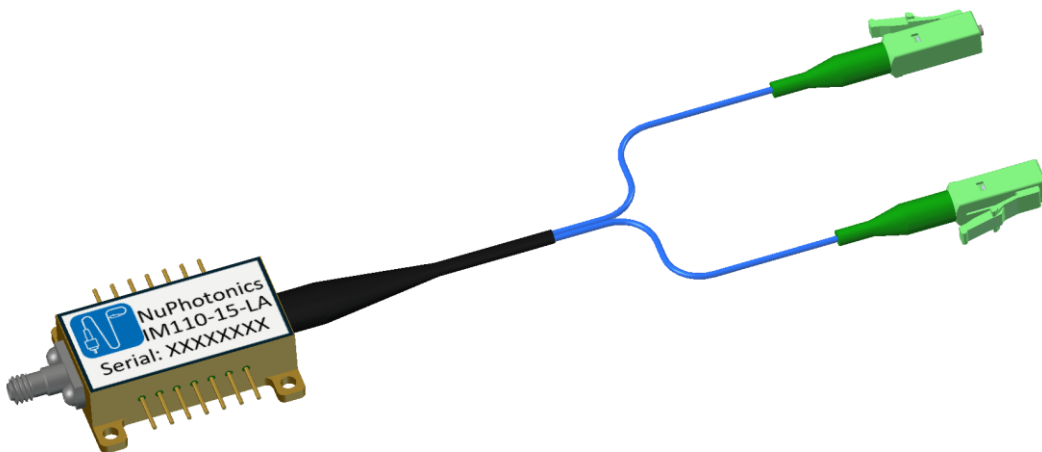

(Rendering)



IMPORTANT NOTICE: more information on warranty, changes, rights, notices, and other information are presented at the back of this data sheet. If the back sheet is not present, refer to www.nuphotonics.com for the company issued data sheet.

Electro-Optical Characteristics (T = 25°C)


Parameter	Symbol	Min.	Typ.	Max.	Unit	Test Conditions
Response Spectrum	λ	1545	1550	1555	nm	
Optical Insertion Loss	IL	-	6	7	dB	
Bandwidth	-3 dB	-	67	-	GHz	Small Signal measurement
	-6 dB	-	110	-		
Electrical Return Loss	S_{11}	-	-10	-8	dB	10 MHz – 110 GHz
RF Halfwave Voltage	V_{π}	-	3.3	-	V	
Extinction Ratio	ER	20	30	-	dB	At DC
RF Input Power	P_{rf}	-	-	15	dBm	
Optical Input Power	P_o	-	-	20	dBm	
Optical Return Loss	ORL	-	40	-	dB	1310 nm

Absolute Maximum Rating (T = 25°C)

Parameter	Symbol	Condition	Min.	Max.	Unit
Bias Voltage	V	-	-	4	V
Forward Current	I_F	-	-	50	mA
RF Input Power	P_{rf}	-	-	17	dBm
Optical Input power	P_{in}	-	-	23	dBm
Storage Temperature	T_{stg}	-	-25	90	°C
Storage Humidity	H_{stg}	-	-	85	% r.H.
Operating Temperature	T_{op}	-	-10	80	°C
Soldering Temperature	T_{st}	60 sec	-	200	°C
ESD Susceptibility		HBM	100		V


Operating at maximum ratings for a prolonged period will cause damage to the device.



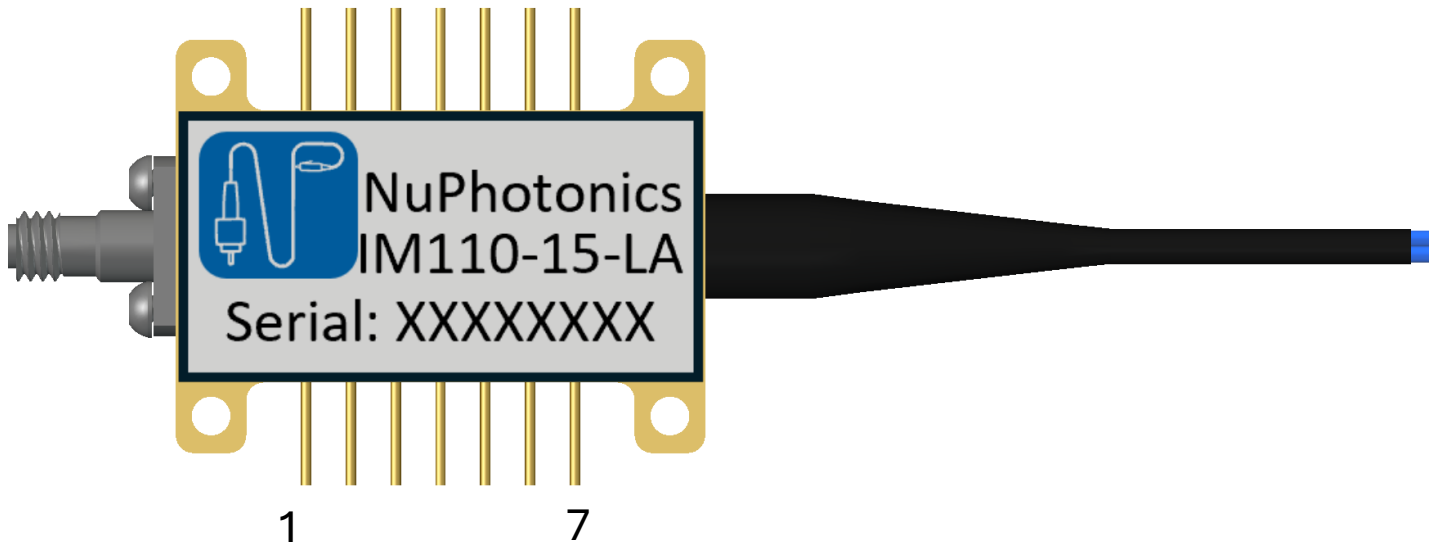


Pin #	Description:
1	No Connection
2	No Connection
3	Heater Bias Voltage (+)
4	Heater Bias Voltage (-)
5	Monitor Photodiode Anode (GND)
6	Output Monitor Photodiode Cathode
7	Input Monitor Photodiode Cathode

Device Nomenclature

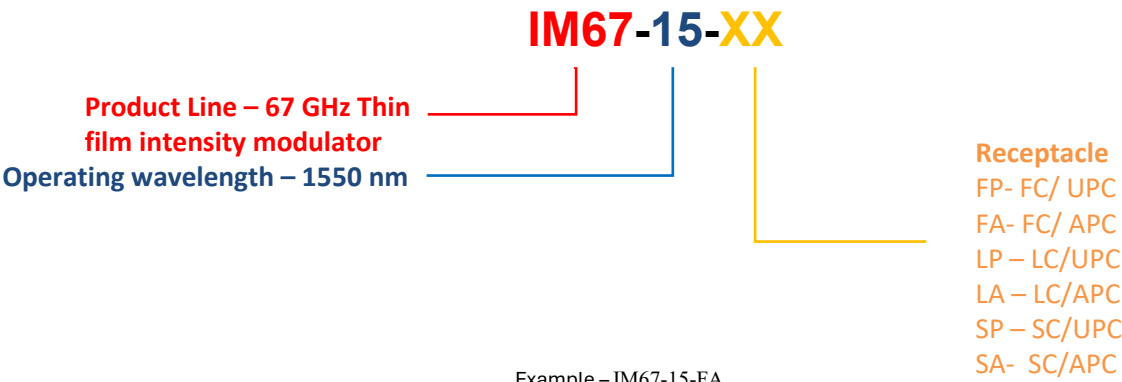



Example – IM67-15-FA

67 GHz Thin Film Intensity Modulator 1550 nm Operating wavelength FC/APC

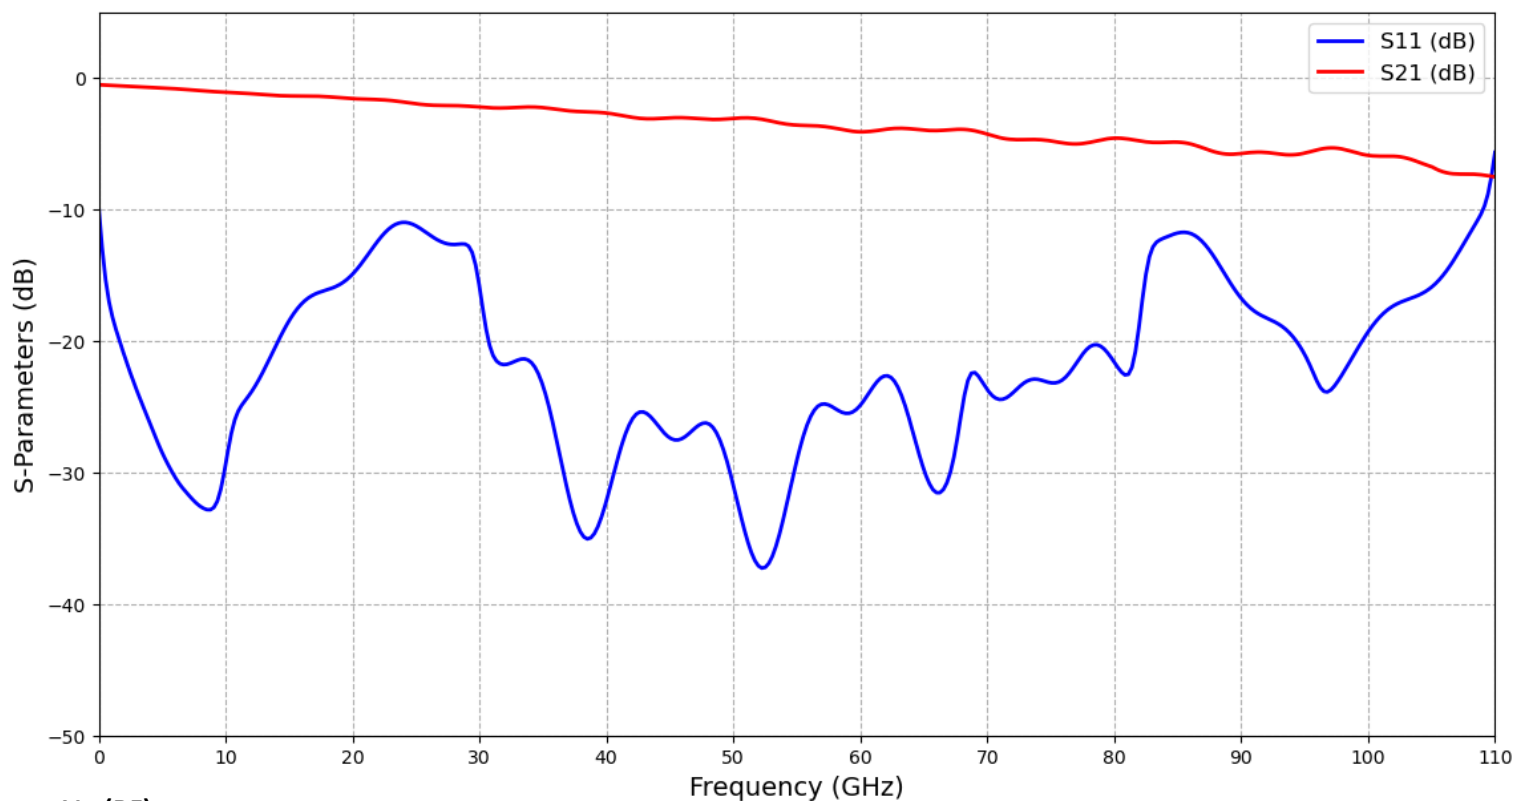

V π (RF)

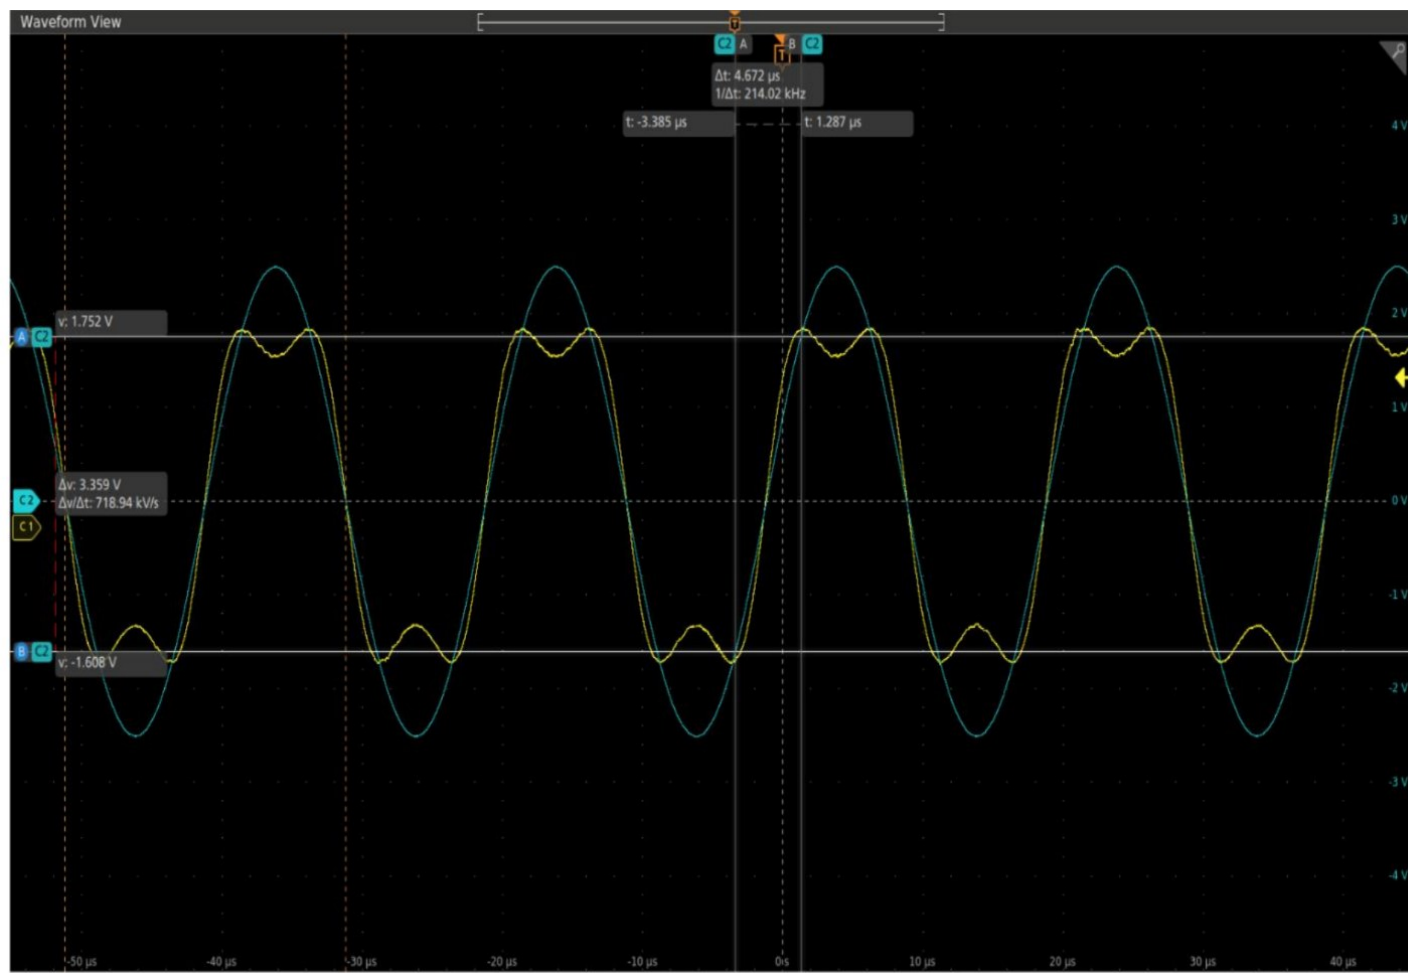

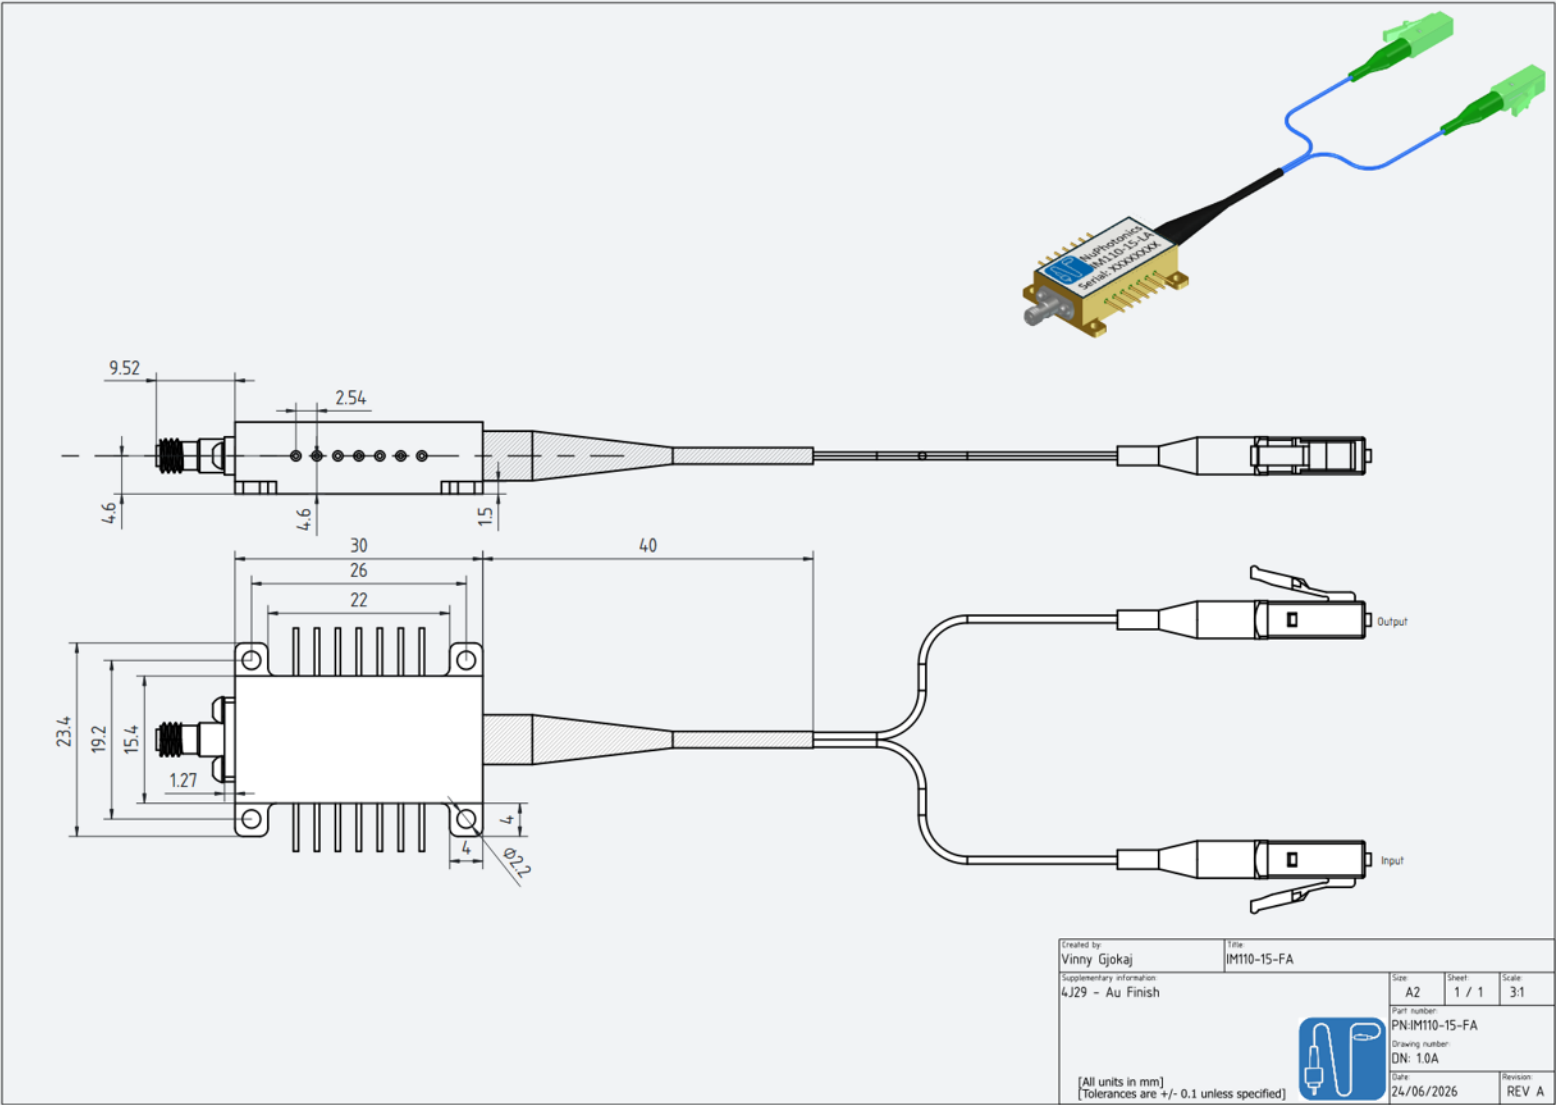

This document is property of NuPhotonics. Unauthorized sharing is prohibited. If you have this without permission, you must permanently delete it. All Rights reserved.



IMPORTANT NOTICES AND DISCLAIMERS

Warranty: NUPHOTONICS PROVIDES ALL OF THE INFORMATION ON TECHNICAL AND RELIABILITY DATA. THIS INCLUDES INFORMATION PRESENTED IN DATA SHEETS, DESIGN FILES, APPLICATIONS, AND OTHER RESOURCES “AS IS” AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD-PARTY INTELLECTUAL PROPERTY RIGHTS.

The information and resources are presented and intended for developers that are skilled and adequately qualified to work with this technology. You, the customer, are solely responsible for and accept full responsibility for selecting the appropriate NuPhotonics devices for your application. You accept the sole responsibility of designing, validating, and testing your application. You bear all responsibility for your application meeting standards, safety, security, and other regulatory requirements.

NuPhotonics retains the right to change these resources without notice. All rights are reserved for NuPhotonics. NuPhotonics grants you permission to use the information in these resources to design with NuPhotonics devices. Reproduction and display of these resources is prohibited. No Third-party licenses are offered. You will fully indemnify NuPhotonics against any claims, damages, costs, losses, and liabilities that arise from you using these resources.

NuPhotonics does not accept and objects to any terms you have proposed.

For terms and conditions for all NuPhotonics products please refer to www.nuphotonics.com Legal section.

Definitions: Product State

Alpha Build: Devices in Alpha build are in internal engineering build and testing stages. Major changes may happen for production build.

Beta Build: Devices in Beta build are for external customer and engineering sample testing stages. Minor changes may happen for production build.

Production Build: Customer ready devices. Small appearance changes may occur between devices.

Obsolete: Currently not supported.

Copyright © 2026, NuPhotonics LLC

Revision History

1.0 – June 2026 – Initial Release