



## DFB + 10G EML 1550 nm TOSA-LC

### Description

A 1550 nm DFB laser packaged with a 10G External Absorption Modulator (EAM) to create an EML. This device offers a built-in power monitoring InGaAs photodiode and Peltier thermal electric cooler (TEC). The device comes in an 8 Pin TO-can LC receptacle. The device features a built-in optical isolator. An optional LC flange can be mounted to allow easy LC connector attachment.

### Features

- 3 mW Optical Power
- Built in monitor Photodiode
- Available wavelengths
  - 1550 nm
  - More coming soon
- 8 GHz Cutoff Frequency
- High power efficiency 90%
- Built in TEC
- Built in Isolator
- Up to 80 KM transmission



### Applications

- Telecommunications
- RF over Fiber (RToF)




IMPORTANT NOTICE: more information on warranty, changes, rights, notices, and other information are presented at the back of this data sheet. If the back sheet is not present, refer to [www.nuphotonics.com](http://www.nuphotonics.com) for the company issued data sheet.

**Electro-Optical Characteristics (T = 25°C)**

Parameter	Symbol	Condition	Min.	Typical	Max.	Unit
Forward Voltage (LD)	$V_f$	Laser	-	1.2	2.0	V
Threshold Current (LD)	$I_{th}$	Laser	-	10	-	mA
Spectral Width	$\Delta\lambda$	Laser	-	1	-	nm
Constant Optical Power	$P_{cw}$	Laser	-	3	-	mW
Center Wavelength	$\lambda_c$	T = 25°C	1540	-	1550	nm
Side-Mode Suppression	SMSR	CW, 90mA	30	-	-	dB
Monitor Current	$I_m$	-	50	-	2000	$\mu$ A
Bandwidth	BW	-	-	8	-	GHz
Optical Isolation	Iso	-	30	-	-	dB
Thermistor	$R_{th}$	25°C	-	10	-	k $\Omega$
Relative Intensity Noise	RIN	25°C	-	-	-130	dB/Hz
TEC	Qmax	-	-	-	0.6	W
	I <sub>max</sub>	-	-	-	0.9	A
	V <sub>max</sub>	-	-1.2	-	1.2	V
	$\Delta T$	-	-	40	-	K
	B Const	R <sub>th</sub>	-	3930	-	K
Laser Series Resistance	R	25°C	-	8	-	$\Omega$
Modulator Voltage	V <sub>mod</sub>	25°C	-4	-	1	V




**Absolute Maximum Rating (T = 25°C)**

Parameter	Symbol	Condition	Min.	Max.	Unit
Reverse Voltage	$V_r$	Laser	-	2	V
		Photodiode		10	
Forward Current	$I_F$	Laser	-	140	mA
Reverse Current	$I_R$	Photodiode	-	2	mA
TEC Current	$I_{TEC}$	-	-	1.2	A
Storage Temperature	$T_{stg}$	-	-25	90	°C
Storage Humidity	$H_{stg}$	-	-	85	% r.H.
Operating Temperature	$T_{op}$	-	-25	80	°C
Soldering Temperature	$T_{st}$	60 sec	-	200	°C
ESD Susceptibility		HBM	100	-	V

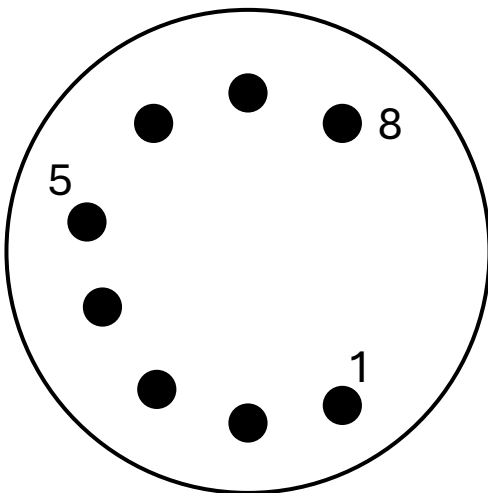**Device Pin Configuration**


Pin #	Description:
1	Thermistor
2	Laser Anode (+)
3	Photodiode Anode (+)
4	TEC (-)
5	TEC (+)
6	GND
7	Modulator Bias + RFin
8	GND

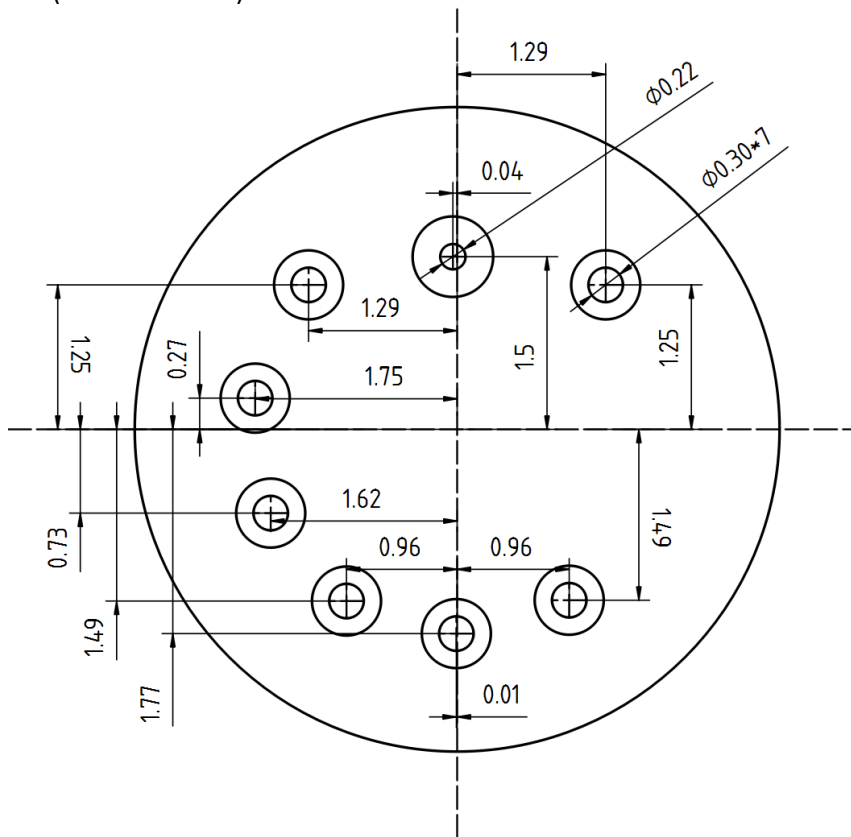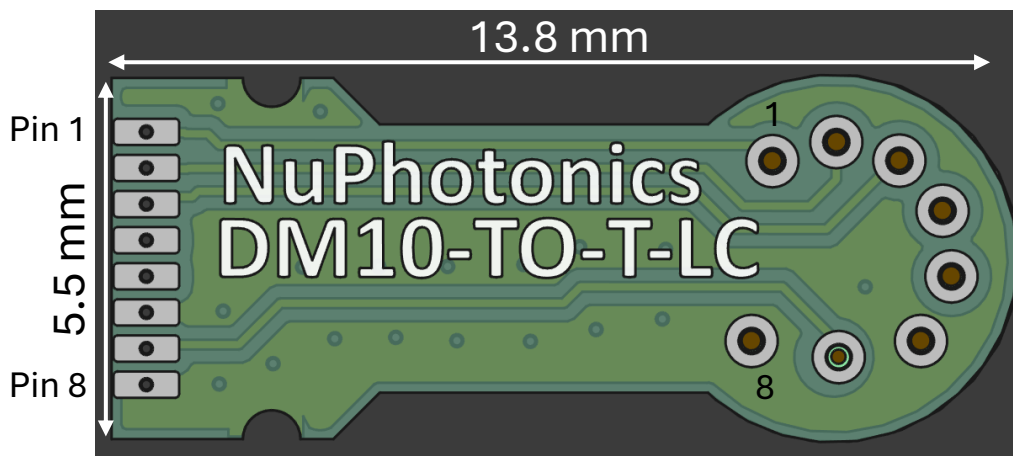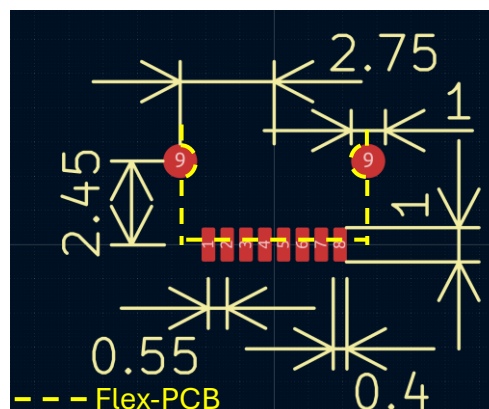

**Footprint Dimensions** (all units in mm)**Flexible PCB** (optional for mounting device horizontally)**Recommended Footprint****Footprint note:**


Pin 9 should be tied to RF/DC ground. These pins offer mechanical support to the flexible PCB.



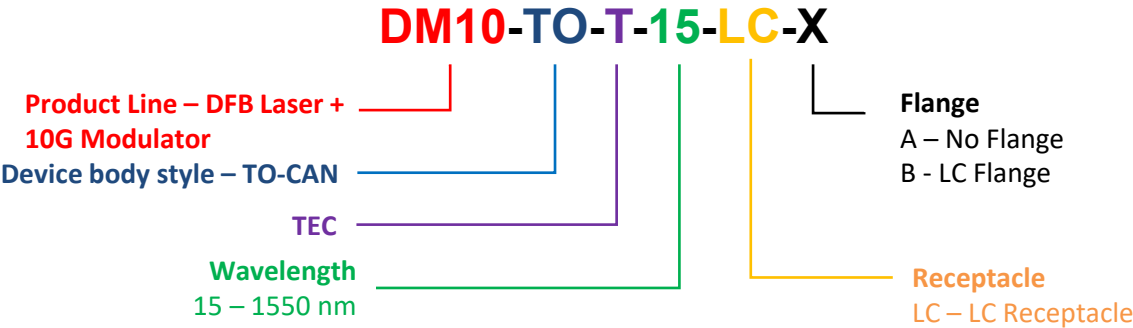


Example – DM10-TO-T-15-LC-B  
1550 nm DFB + 10G Modulator TO-Can with TEC LC receptacle with LC flange.

Mechanical Drawing

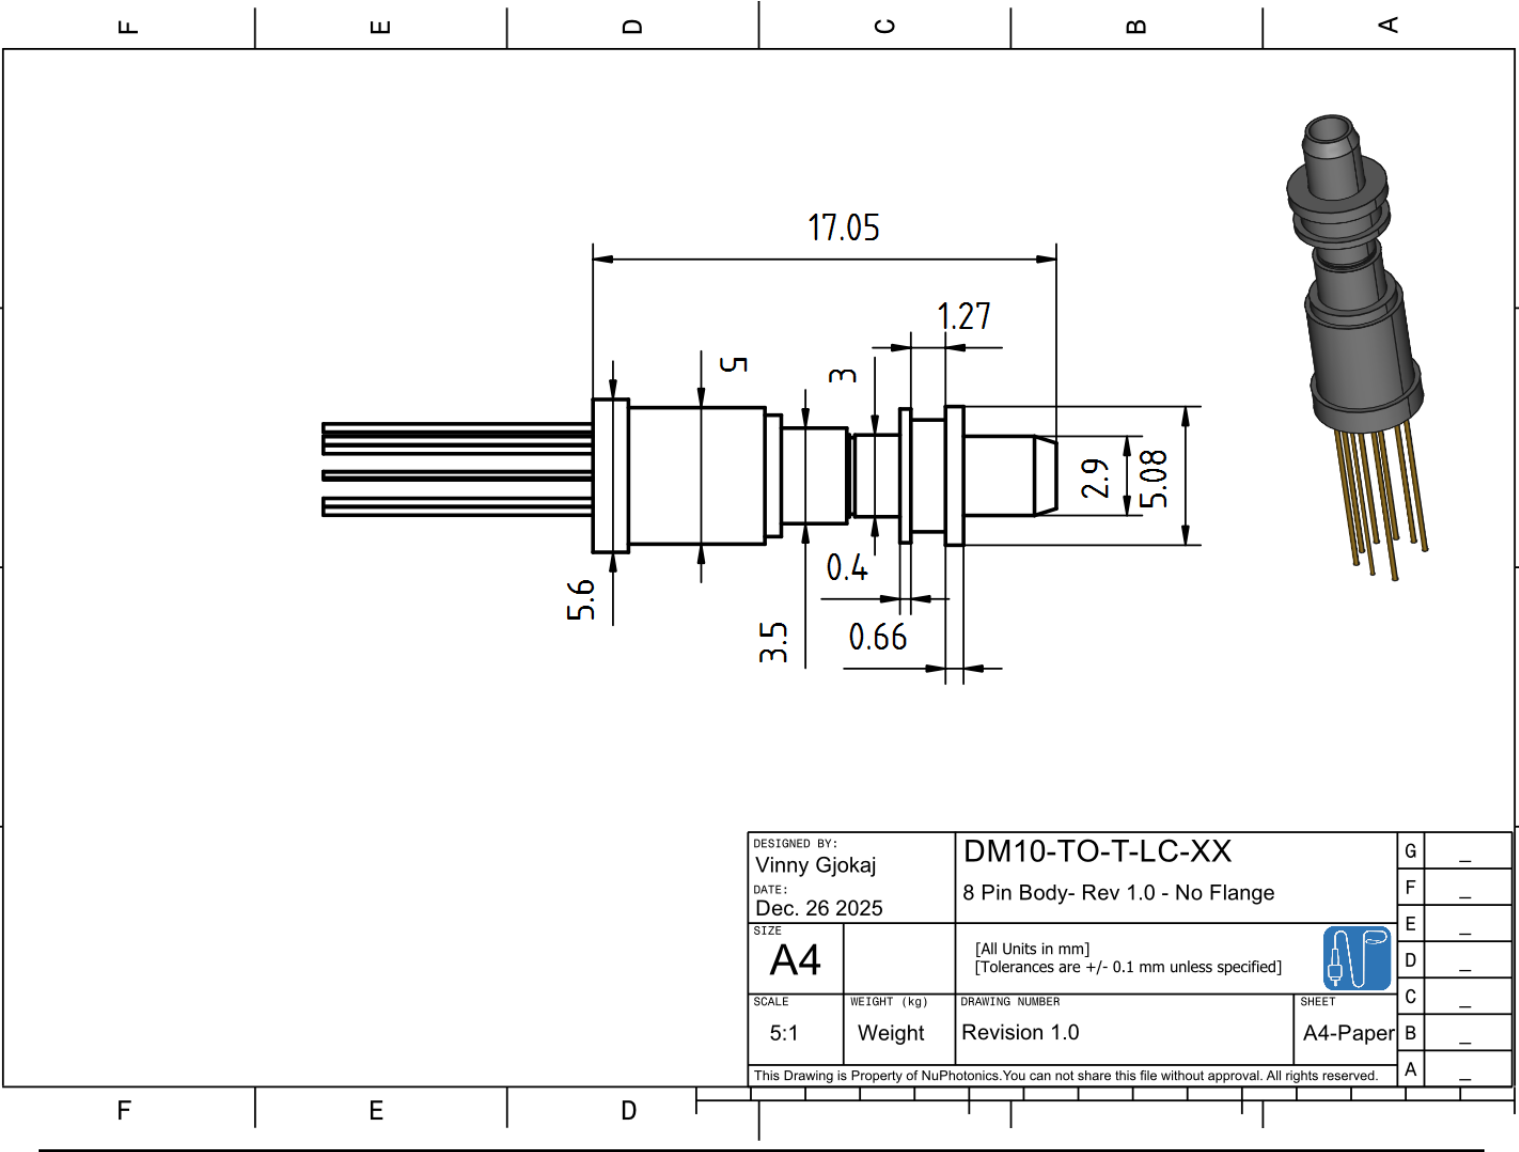

## Mechanical Drawing (With Flange)

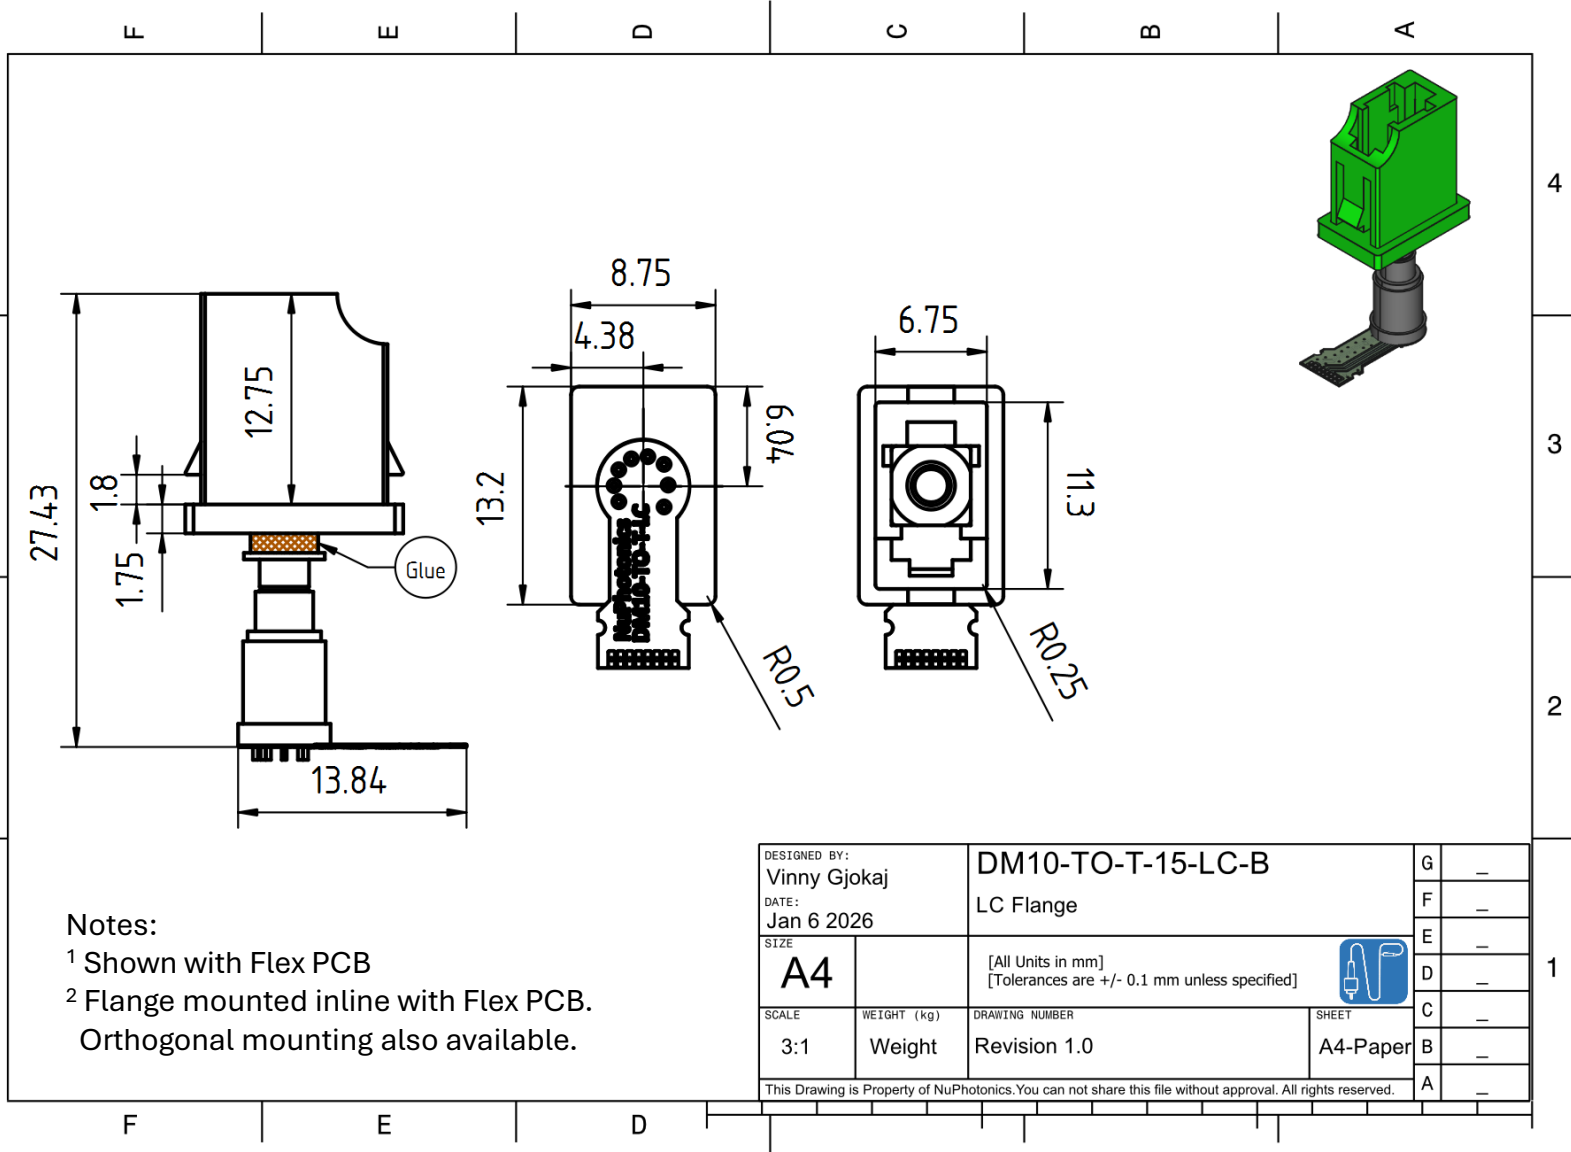

# IMPORTANT NOTICES AND DISCLAIMERS

Warranty: NUPHOTONICS PROVIDES ALL OF THE INFORMATION ON TECHNICAL AND RELIABILITY DATA. THIS INCLUDES INFORMATION PRESENTED IN DATA SHEETS, DESIGN FILES, APPLICATIONS, AND OTHER RESOURCES “AS IS” AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD-PARTY INTELLECTUAL PROPERTY RIGHTS.

The information and resources are presented and intended for developers that are skilled and adequately qualified to work with this technology. You, the customer, are solely responsible for and accept full responsibility for selecting the appropriate NuPhotonics devices for your application. You accept the sole responsibility of designing, validating, and testing your application. You bear all responsibility for your application meeting standards, safety, security, and other regulatory requirements.

NuPhotonics retains the right to change these resources without notice. All rights are reserved for NuPhotonics. NuPhotonics grants you permission to use the information in these resources to design with NuPhotonics devices. Reproduction and display of these resources is prohibited. No Third-party licenses are offered. You will fully indemnify NuPhotonics against any claims, damages, costs, losses, and liabilities that arise from you using these resources.

NuPhotonics does not accept and objects to any terms you have proposed.

For terms and conditions for all NuPhotonics products please refer to [www.nuphotonics.com](http://www.nuphotonics.com) Legal section.

Definitions: Product State

Alpha Build: Devices in Alpha build are in internal engineering build and testing stages. Major changes may happen for production build.

Beta Build: Devices in Beta build are for external customer and engineering sample testing stages. Minor changes may happen for production build.

Production Build: Customer ready devices. Small appearance changes may occur between devices.

Obsolete: Currently not supported.

Copyright © 2025, NuPhotonics LLC

## Revision History

1.0 – December 2025 – Initial Release