



10G DFB 1550 nm 10 mW Pigtail TO-CAN - TEC

Description

A 10G 1550 nm DFB laser packaged with a power monitoring InGaAs photodiode and a Peltier thermoelectric cooler (TEC). The device comes in an 8-pin pigtailed TO-can with customizable SMF-28 fiber and optical connector. The device features a built-in optical isolator.

Features

- High output power 10 mW
- Built-in monitor Photodiode
- Available wavelengths
 - 1310 nm
 - 1550 nm
- 6GHz Cutoff Frequency
- High power efficiency 90%
- Selectable optical connector options.
- Built-in Isolator



Applications

- Optical time-domain reflectometer (OTDR)
- Telecommunications
- RF over Fiber (RFOF)



IMPORTANT NOTICE: More Information on warranty, changes, rights, notices, and other information are presented at the back sheet of this data sheet. If the back sheet is not present, refer to www.nuphotonics.com for the company-issued datasheet.


Electro-Optical Characteristics (T = 25°C)

Parameter	Symbol	Condition	Min.	Typical	Max.	Unit
Forward Voltage	V_f	Laser	-	1.2	1.6	V
Threshold Current	I_{th}	Laser	3	-	15	mA
Pulsed Optical Power	P_{pulse}	Laser	20	-	-	mW
Constant Optical Power	P_{cw}	Laser	-	10	-	mW
Center Wavelength	λ_c	T = 25°C	1549	-	1551	nm
Bandwidth	BW	-	-	5	-	GHz
Optical Isolation	Iso	-	30	-	-	dB
Thermistor	R_{th}	25°C	-	10	-	k Ω
Relative Intensity Noise	RIN	25°C	-	-	-130	dB/Hz
TEC	Qmax	-	-	-	0.6	W
	I _{max}	-	-	-	0.9	A
	V _{max}	-	-	-	1.2	V
	ΔT	-	-	40	-	K
Laser Series Resistance	R	25°C	-	10	-	Ω

Absolute Maximum Rating (T = 25°C)

Parameter	Symbol	Condition	Min.	Max.	Unit
Reverse Voltage	V_r	Laser	-	2	V
		Photodiode	-	10	V
Forward Current	I_F	-	-	300	mA
Reverse Current	I_R	Photodiode	-	2	mA
Fiber Bend Radius	R	SMF28	30	-	mm
Storage Temperature	T_{stg}	-	-25	90	°C
Storage Humidity	H_{stg}	-	-	85	% r.H.
Operating Temperature	T_{op}	-	-25	80	°C
Soldering Temperature	T_{st}	60 sec	-	200	°C
ESD Susceptibility		HBM	100	-	V


Device Pin Configuration

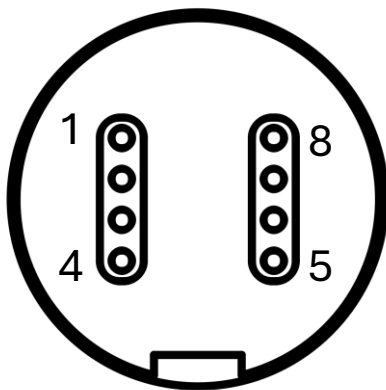

Bottom view

Pin #	Description:
1	Photodiode Anode (+)
2	Photodiode Cathode (-)
3	Thermistor
4	TEC (+)
5	TEC (-)
6	Thermistor
7	Laser Anode (+)
8	Laser Cathode (-)



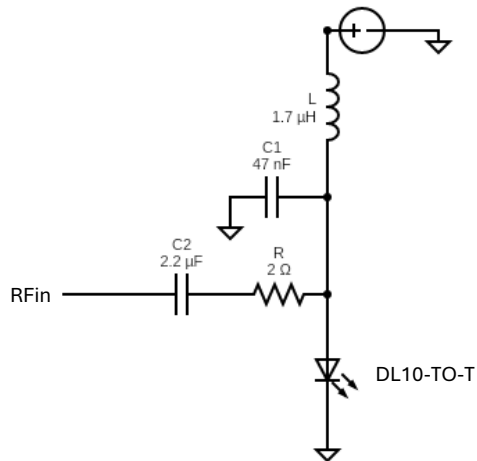

Test Circuit Configuration

L – 1.7 μ H Coil inductor (Rated 26 GHz)

C1 – 47 nF 0201 RF Capacitor

C2 – 2.2 μ F 0402 RF Capacitor


R – 2 Ω 0402 RF Resistor

Microstrip traces - 50 Ω ground backed coplanar waveguide (GB-CPW)

Engineering Notes:

The DFB laser diode is a 10 Ω series device. Impedance matching the device can be difficult for large bandwidths. To improve S11 impedance matching, a series SMD resistor **R** can be placed which will help lower the S11 < -10 dB. Limiting **R** < 5 Ω will help minimize S21 additional losses. If a flatter S21 is more desirable, **C1** can be added to the impedance matching structure. Balancing **R** and **C1** will yield a flatter S21 response with better S11 matching.




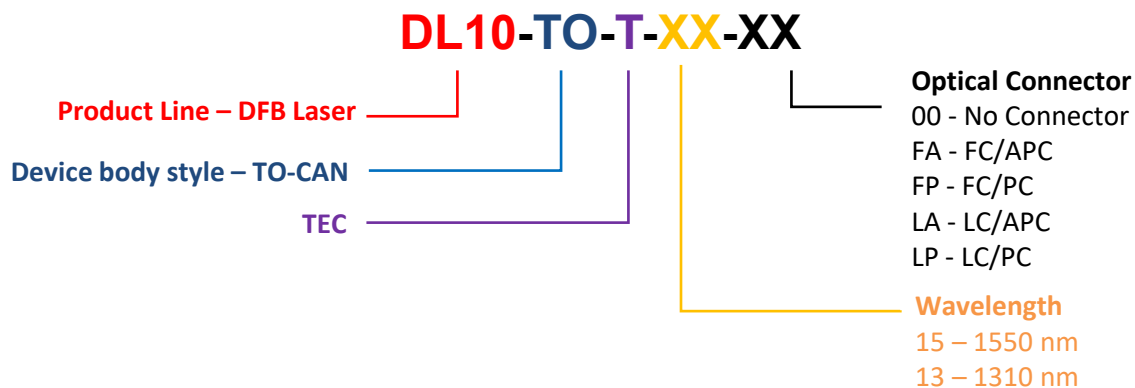

Example – DL10-TO-T-A-15-FA

10G DFB Laser TO-can TEC Standard pinout 1550 nm FC/APC

Mechanical Drawing

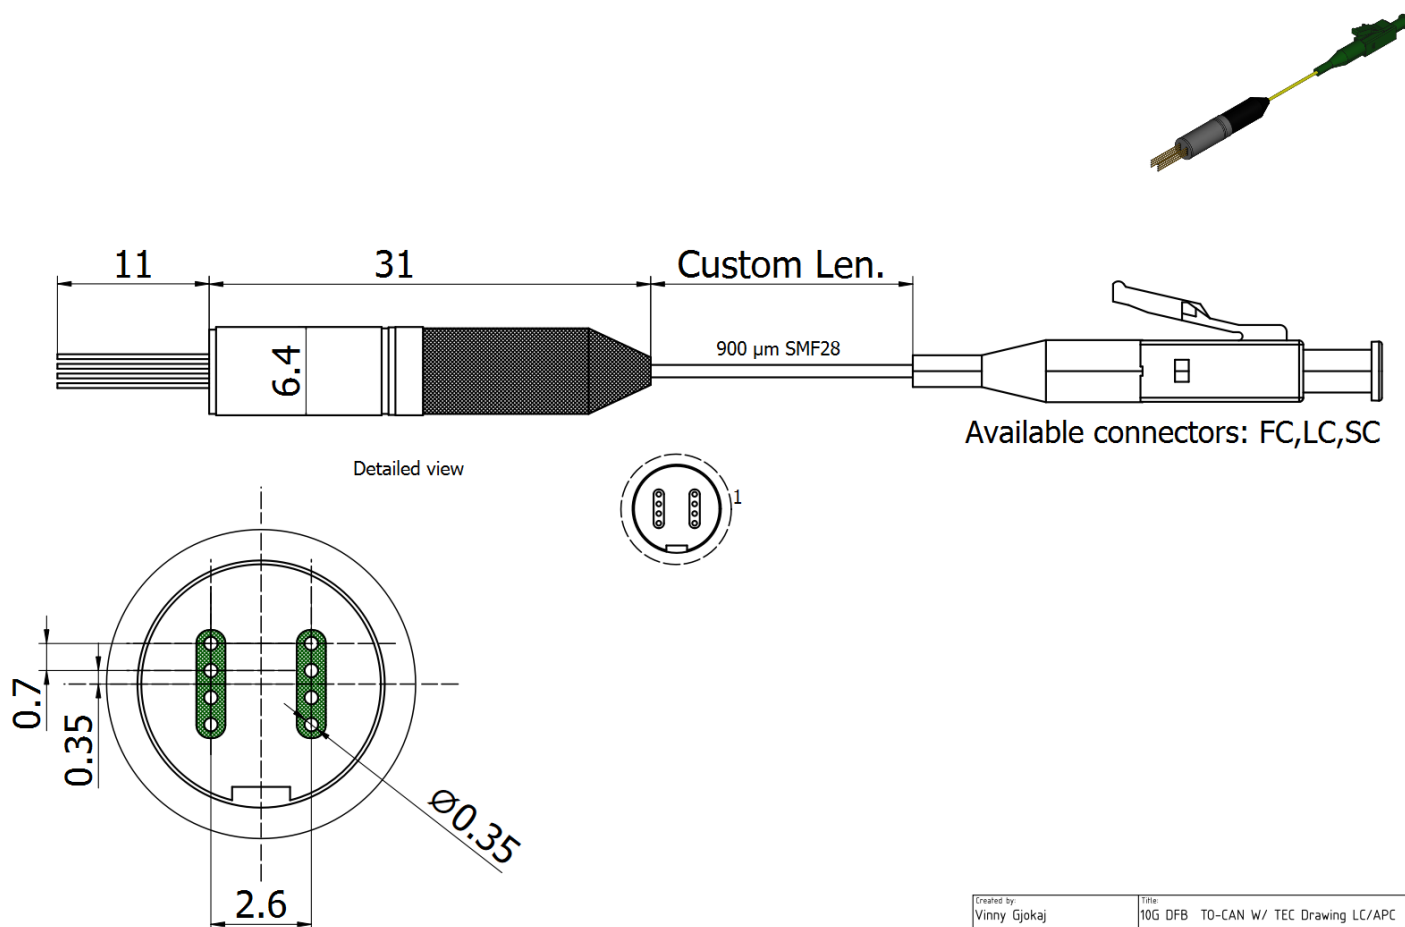

Created by: Vinny Gjokaj	Title 10G DFB TO-CAN w/ TEC Drawing LC/APC		
Supplementary information:	Size A2	Sheet X / Y	Scale 5:1
	Part number DL10-TO-T-15-A-LA		
	Drawing number DN: 1.0.0.0		
Date 24/04/2025			Revision REV A

This document is property of NuPhotonics. Unauthorized sharing is prohibited. If you have this without permission, you must permanently delete it. All Rights reserved.



IMPORTANT NOTICES AND DISCLAIMERS

Information and Warranty Disclaimer

NuPhotonics provides technical and reliability information, including datasheets, design files, application notes, and other materials (collectively, “Resources”), to assist designers who are developing applications that incorporate NuPhotonics products. These Resources are provided “as is” and “with all faults.” NuPhotonics makes no warranties or representations, express or implied, regarding the Resources, including, without limitation, accuracy, completeness, reliability, or fitness for a particular purpose. NuPhotonics disclaims all implied warranties, including warranties of merchantability, fitness for a particular purpose, and non-infringement of third-party intellectual property rights.

Use of Resources

These Resources are intended for use only by skilled and qualified developers. The customer is solely responsible for selecting appropriate NuPhotonics products and for designing, validating, and testing their applications. The customer is further responsible for ensuring that their applications meet all applicable standards, safety requirements, and regulatory obligations.

Changes and Availability

NuPhotonics reserves the right to make corrections, modifications, enhancements, improvements, and other changes to its Resources and products at any time and without notice. NuPhotonics may discontinue any product or Resource without notice.

License and Restrictions

NuPhotonics grants a limited, non-exclusive, non-transferable license to use the Resources solely for the purpose of developing applications that incorporate NuPhotonics products. No other license, express or implied, is granted, including any license to third-party intellectual property. Reproduction, distribution, or display of the Resources, in whole or in part, without prior written permission from NuPhotonics is prohibited.

Limitation of Liability and Indemnification

In no event shall NuPhotonics be liable for any direct, indirect, incidental, special, consequential, or exemplary damages arising out of the use of the Resources. The customer agrees to defend, indemnify, and hold harmless NuPhotonics from and against any claims, damages, costs, losses, and liabilities arising from the customer’s use of the Resources or products.

Terms and Conditions

NuPhotonics objects to and rejects any additional or different terms proposed by the customer. For complete terms and conditions of sale, refer to the Legal section at www.nuphotonics.com.

Definitions: Product State

Alpha Build – Device is in internal engineering development and testing. Specifications are subject to significant change.

Beta Build – Device is available for external evaluation and engineering sampling. Specifications are subject to minor change.

Production Build – Device is released for production. Minor cosmetic or appearance variations may occur.

Obsolete – Device is no longer in production and is not supported.

Copyright © 2026, NuPhotonics LLC

Revision History

1.1 – March 2026 – Grammatical and spelling error correction. Updated Disclaimer section

1.0 – April 2025 – Initial Release